

WI-FI Connection

Hand-held device, notebook and other intelligence terminal with WI-FI can drive RG-P80B / RG-P80A/RG-P58D (hereinafter referred to as the "REGO Printer") through WI-FI.

REGO Printer supports AP and STA modes. It is very convenient to connect with other net equipment.

REGO Printer default parameter as below:

AP SSID: Model name_XXXX (Model name: RG-P80B/RG-P80A/RG-P58D,XXXX: last 2 bytes of MAC)

AP Encryption: OPEN, NONE;

AP IP address: 192.168.10.1;

AP Port No. : 9100

AP mode:

The REGO printer is as a wireless access point, the other devices as the wireless information terminals connected for printing.

STA mode:

The REGO printer is as a wireless terminal through a wireless access point connecting with other devices.

When first use WI-FI interface for REGO Printer, you need to configure the WI-FI module parameters. The details please refer to following steps:

1.Restore factory settings for REGO Printer :Press the **Feed key** five times to restore the factory settings



(RG-P58D)



(RG-P80B)



(RG-P80A)

2. Search the AP SSID name of REGO Printer (ex. RG-P58D_08A8), and connect the SSID name with mobile phone or computer.




3. Open Google browser and enter AP IP address:192.168.10.1



Choose Work mode: Connect to Router

Choose the SSID which you want to connect and input the password and finish the configuration

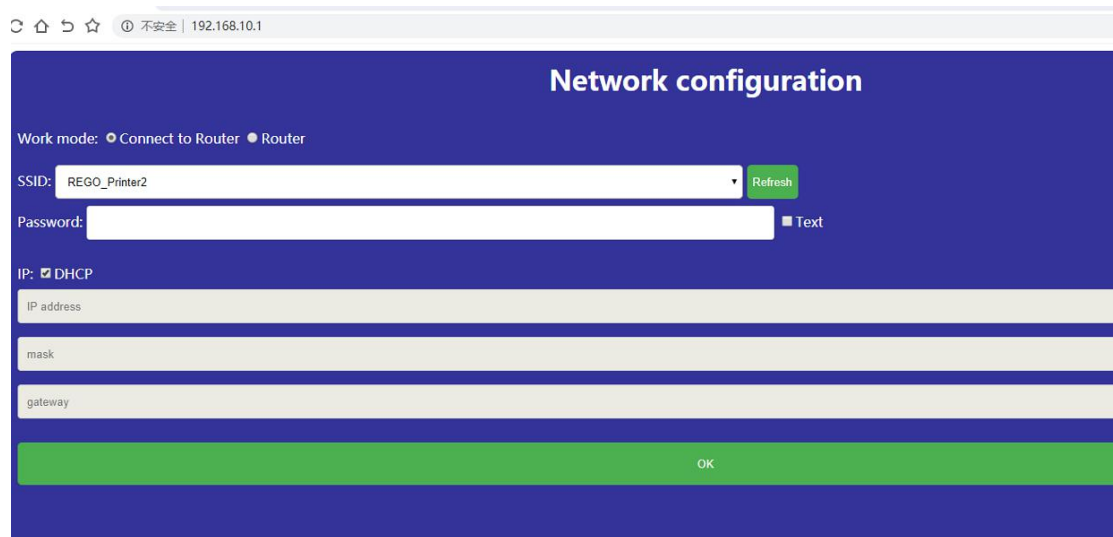

Waiting for the print ticket.



Print set complete

Print set success, please waiting for the print ticket